


# FLIPPER<sup>®</sup>

## Two Device Universal

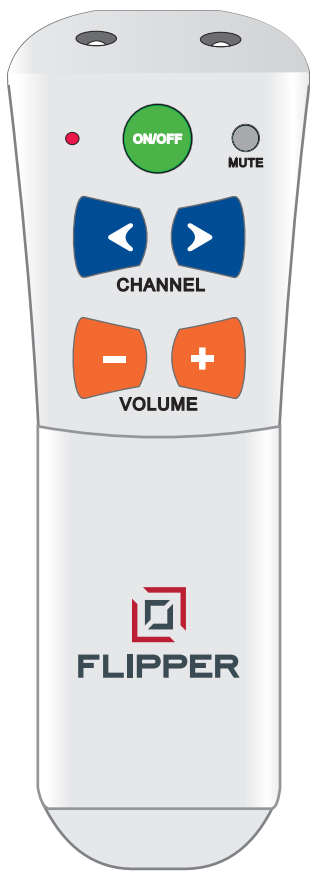

## Instruction Manual


© Flipper LC 2009. US Patent Pending  
Support: [www.FlipperRemote.com](http://www.FlipperRemote.com)

### Table of Contents

Introduction	2
Functions	2
Set Up	3
Step 1: TV set up	3
Step 2: Set Top Box (STB)	4
Step 3: Favorite Channels	4
Step 4: Dual Mode (TV & STB)	6
Step 5: Lock	7
ON / OFF Options	7
TV Only	7
STB Only	8
Channel Entry Options	8
Other Set-up Options	9
Automatic Code Searching	9
Learning Set Up	10
Troubleshooting	11
Code Retrieval	11
Reset the Remote	12
TV Brand Code List	13
STB Brand Code List	19

### Battery Installation

Use two (2) new AAA batteries. Please see the following instruction when installing the batteries.

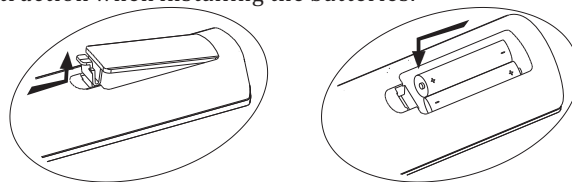

1. Open the battery cover in the back of the remote as illustrated.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries. If the installation is correct, the indicator light will flash 2 times.
3. Put the battery cover back on.
4. Press any key, if the indicator light flashes, installation is correct.

#### Warnings:

1. Do not mix new batteries with old ones or place the batteries incorrectly.

- Please finish the battery installation within 5 minutes, otherwise the programmed codes Will be lost. Do not press any key during installation.
- Remove the batteries if you do not plan to use the remote for a long period of time to prevent electrolyte leaking. If leaking occurs, clean the contaminated area of the battery compartment and replace the old batteries with new ones.

## Introduction

Thank you for your purchase of the Flipper two device remote control. Flipper is designed for use with your Television and Set Top Box (STB). STB's are Cable, Satellite, and Digital TV (DTV) receiver boxes.

Flipper is preset to work with most Motorola STBs.

### Ease of Use

Flipper remote operates both your TV and STB using a minimum number of buttons.

### Favorite Channels

You can program up to 30 of your favorite channels. When activated, the **Channel Up/Down** will only advance through these channels. This feature does not change the channel settings of your TV, STB, or other remote controls.

### Dual Mode

In Dual Mode, the **ON/OFF** button powers on and off both the TV and STB; **Channel Up/Down** and the 0-9 keypad controls the channels on the STB; and **Volume Up/Down** controls the TV, eliminating the need to press a button to switch devices.

### Lock

This feature "Locks" the settings of the remote, including favorite channels, and dual mode, and prevents accidental reprogramming.

## Functions



**ON/OFF:** controls both the TV and STB.



Press **MUTE** once to turn the sound on or off.



**Channel Up/Down:** Controls the STB channels.



**Volume Up / Down:** Controls the TV volume.



**0-9** located under the sliding door, are for set up and channel entry.

**"Dash"** is used for DTV channel entry.



**LC** is for "Last Channel" – returns to the last channel you are viewing.



**TV** and **STB** buttons are used to set up your devices.



**ADD** and **DEL** buttons are used to set up favorite channels.



Indicator light - flashes during set up and when the remote is used.

## Setup

Please follow these step-by-step instructions for the initial set-up. Remember to use new AAA batteries for best results.

If you receive your TV stations through an STB, please note how your TV is connected to the STB. Newer TVs are connected through an AV input option, such as Video 1 or 2 or Antenna 1 or 2. Older TVs may be set to channel 3 or 4. This will allow you to easily reset the TV if you accidentally change your TV's channel during set up.

### Step 1: TV set up

TV



Locate the 3-digit code for your TV brand in the code list.

- First, 'prime' the remote. Press and hold **ADD** until the light flashes once then turns solid. Then enter 954. The light stays solid then flashes twice.

2. Press and hold the **TV** set-up key. The indicator light at the top of the remote will flash once then turn solid. Release the key.

*Note: If you do not press any key more than 30 seconds, the remote will exit the program.*

3. Enter the first 3-digit code for your TV using the **0-9** key pad. If the code is entered correctly, the light will turn off. If the light stays on, please try again.

4. Try the remote to see if it controls the TV by pressing the **ON/OFF** key and **Volume Up/Down**.

5. If the remote is adjusting your TV, go to **Step 2**.

6. If the remote does not adjust your TV, repeat the process using the next 3-digit code listed for your TV brand until the remote works.

*Note: If you are unable to find a working code, see "Other Set Up Options."*

The code for my TV is \_\_\_\_\_.

## Step 2: Set Top Box (STB)

STB



If you are using a TV without a STB, go to **Step 3**.

Flipper is preset to Motorola cable STBs. It may not work all Motorola STBs, however. If your STB is manufactured by Motorola, press **STB** once (the light will flash) and see if Flipper works your STB. If yes, go to **Step 3**. If not, follow the set up instructions in **Step 1: TV**, except find your STB code, and press **STB** instead of **TV** in # 1.

The code for my STB is \_\_\_\_\_.

## Step 3: Favorite Channels

Setting Favorite Channels is optional. If you do not want a favorite channel list, go to **Step 4**.

You can program up to 30 of your favorite channels. When set, **Channel Up/Down** only scrolls through your Favorite Channels. The **0-9** keypad allows you to key in any available channel. Programming favorites does not change the settings on your STB or other remote controls.

*Note: When advancing through your favorite channels using the **Channel Up/Down** buttons, please allow the channel to switch before pressing the button again.*

### Make a list:

Make a list of your Favorite Channels. The channels will advance in the order they are entered. For instance, if you program channels 225, 125, 57, and then 563, the **Channel Up/Down** will memorize them in that order and advance as 225, 125, 57, 563. Flipper does NOT place channels in numeric order.

### Channel Format:

STBs and TVs generally use a three or four digit channel entry system, 000 or 0000. To enter channels, use 0's as a place holder. For instance, enter channel 7 as 007 (three digit) or 0007 (four digit). For channel 22, enter as 022 or 0022. If your TV or STB requires an Enter key to change channels, please see "**Channel Entry Options**."

### DTV channel format:



Please consult your DTV manual. Use the **dash "-"** button, if needed. Some DTVs do not use a dash, and instead may enter channels in different formats, such as 401 for channel 4-1, or 0301 for channel 30-1.

If using a newer TV with an over the air digital tuner, you may need to learn the dash key from your existing remote. See "**Learning Set Up**"

### Adding Favorites:

STB ADD



The instructions below assume that you are programming Favorites to work with an STB device. If you are using a TV without a STB, substitute the **TV** key for the **STB** key.

1. Press **STB** then **ADD**. The indicator light will flash once then turn solid. Release both buttons.

2. Key in the first channel and press the **ADD** button, key in the next channel and then **ADD**, and continue until all channels are added. The light will flash one time for each digit.

Example:

007 **ADD**, 044 **ADD**, 110 **ADD**, etc., for channels 7, 44, 110;  
For a DTV: 4 - 1 **ADD**; 44 - 2 **ADD**, for channels 4-1, and 44-2

3. Press the **STB** button after all channels are added to complete the process.
4. Use the **Channel Up/Down** buttons to scroll through your Favorites. It may be necessary to scroll through a second time for all Favorite channels to appear.
5. If you need to add more channels, repeat. Otherwise, go to **Step 4**.

### Deleting Favorites:



Follow the instructions above for adding channels, except use the **DEL** button instead of the **ADD** button.

### Switching Between Favorite and Regular Mode:

To exit favorite channel mode, press and hold **DEL** and **dash** - at the same time until the light flashes twice and turns off.

To re-enter, press and hold **DEL** and **dash** - at the same time until the light flashes twice and turns off.

### Step 4: Dual Mode (TV & STB)



If you are using a TV without a STB, go to **Step 5**.

In Dual Mode, the **ON/OFF** button controls both the TV and STB; **Channel Up/Down** and the **0-9** keypad control the STB; and **Volume Up/Down** controls the TV

To **Enter** Dual Mode, press and release **ADD**. The indicator light will flash once.

To **Exit** Dual Mode, press and release either **TV** or **STB**. The indicator light will flash once.

*Note: The remote works best when the TV and STB are close to one another. If the TV and STB do not turn On and Off at the same time, press the **ON/OFF** button until both devices turn either On or Off, or manually turn On or Off the device.*

Note: Flipper can be programmed to turn ON / OFF either the TV or STB only – please see “**ON / OFF Options.**”

### Step 5: Lock

This feature “Locks” the settings of the remote, including Favorites, and Dual Mode. If you do not want to lock the set up of your remote control, set-up is complete. Enjoy using your Flipper remote!

#### To Lock:

1. In Dual mode, press and hold **ADD**. The light will flash once then turn solid. Release the button, and enter 955. The light flashes twice.
2. In TV mode, press and hold **TV**. The light will flash once then turn solid. Release the button, and enter 955.
3. In STB mode, press and hold **STB**. The light will flash once then turn solid. Release the button, and enter 955.

#### To Unlock:

Follow the instructions above, except use code 956 to unlock.

### ON/OFF Options:

In Dual Mode, the **ON/OFF** turns On and Off both the TV and STB. Occasionally, the remote may only turn On or Off either the STB or TV. If this happens, press the **ON/OFF** button again until both devices operate at the same time. To avoid this from happening, place the TV and STB close to each other.

### TV Only

To have **ON/OFF** control the TV only, **Channel Up/Down** control the STB, and **Volume Up/Down** control the TV, first set the code for the TV and STB as shown in Step One and Two. Then:



1. Press and hold the **STB** button and then the **ON/OFF** button. The indicator light will flash once, then remain flashing. Release both buttons.
2. Face your existing TV remote control's signal transmitter (on the front) to the Flipper remote control transmitter, with 3-5cm gap in between the remotes.

3. Press and release the **ON/OFF** key on Flipper remote control. The indicator light will turn solid.
4. Press and release the **Volume Down** key for your TV's existing remote control. The indicator light on Flipper remote should start flashing again.
5. Press **STB** to save the setting.
6. Enter Dual Mode by pressing and releasing **ADD**. The light will flash once.
7. Try the buttons. **ON/OFF** should control the TV only, **Channel Up/Down** should control the STB, and **Volume Up/Down** should control the TV. If not, repeat the process.
8. If you want to Lock, use **ADD** for Dual Mode in **Step 5**.

Note: Replacing the STB's ON / OFF signal with the TV's Volume key deactivates the STB's ON / OFF signal, so that only the TV will turn On and Off.

### STB Only:

Press **STB**. The indicator light will flash once. The **ON/OFF** will control your STB; **Channel Up/Down** will control the STB, and the **Volume Up/Down** should control your TV.

If **Volume Up/Down** does not control your TV, then follow the instructions above under TV Only, except in #1, use the **TV** set up key instead of the **STB** key, and follow the rest of the instructions, including Dual Mode. This will deactivate the TV's ON / OFF signal, so that only the STB turns on and off, while the **Channel Up/Down** will control the STB, and **Volume Up/Down** should control your TV

### Channel Entry Options

Some TV / STBs may change channels faster if an ending signal is sent, such as OK/SELECT or ENTER.

Flipper does not send an ending signal in favorite channel mode. If you require an ending signal, please follow the instructions below.



Note: If you are using the favorite channel mode with a TV only, use **TV** instead of **STB**:

1. Press and hold the **STB** button and then the **ON/OFF** button at the same time. The indicator light will flash once, then remain flashing. Release both buttons.
2. Face your existing remote control's signal transmitter (on the front) to the Flipper remote control transmitter, with 3-5cm gap in between the remotes.
3. Press and release the **dash** - key on Flipper remote. The indicator light should turn solid.
4. Press and release the button from your existing remote that sends the best ending signal, usually ENTER or OK/SELECT. The indicator light on the Flipper remote should start flashing again.
5. Press **STB** to save the setting. The **dash** - is now your ENTER key.
6. Test the remote to see if the ending signal is 'learned' by pressing **dash** - and making sure it does the same function as your existing remote. If not, repeat the process.
7. In favorite channel mode, add channels by following the set up instructions above. Then, enter channels with the **dash** - / Enter. Example: 7 **dash** - **ADD**; 23 **dash** - **ADD**, etc.

Note: STB's generally do not require an enter signal. It is recommended that the enter signal is not used when entering three and four digit numbers.

### Other Set-up Options

It is strongly recommended that you use the set up instructions above to set up your remote control. However, there may be instances where your device is not in the code list. If you were not able to find the codes for your device using the recommended process, try one of these two methods.

### Automatic Code Searching:

This method automatically sends a group of codes until your device turns OFF. Start with either TV or STB ON.

1. Press and hold **TV** or **STB**. The light will flash once then stay solid. Release the key.
2. Press and release the **ON/OFF** button. The remote will send 10-15 codes to your TV or STB. The indicator light flashes quickly when sending, and turns solid when complete.

3. If your TV or STB turns OFF, the code is in that group. If the device did not turn off, repeat until your device turns off.
4. Once your device turns off, wait until the indicator light stops flashing, then press and release the **Channel Down** button to send one code at a time until your device turns ON.
5. Once the device turns ON, press **TV** or **STB** to set and try your device. If all buttons do not work, repeat.

*Note: Some devices share codes with others. As a result, it is possible that a code matches some but not all of your device's functions. If this happens, repeat the process until the correct code controls all of your device's function.*

### Learning Set Up:

Flipper remote can learn function signals from your existing remote control. This allows you to copy the signals from your current remote into the Flipper remote. Each key is programmed separately. **TV**, **STB**, and **ADD** do not learn functions.

*Note: Favorite channel mode may not work with Learning set up.*

1. Press and hold the **TV** or **STB** button and the **ON/OFF** button. The indicator will flash once, then remain flashing. Release the keys.
2. Face your existing remote control's signal transmitter (on the front) to the Flipper remote transmitter, with 3-5cm gap in between the remotes.
3. Press and release the key on Flipper remote control that you want to program from your other remote. The indicator light will turn solid. Each key is programmed separately.
4. Press and release the same key from your existing device remote until you see the light on the Flipper remote start flashing again. The learning process for that key is done.
5. Keep repeating step 1-4 until you learn all the keys you want.
6. Press the **TV** or **STB** button to set the remote.
7. Check the buttons to see if they learned the correct signal. If not, repeat the process as needed until all buttons learn the desired function.

*Note: The remote can learn functions for any IR remote control, including a stereo.*

## Troubleshooting

If you are experiencing difficulties with your remote control, remember these helpful hints:

1. Make sure the remote is unlocked, by pressing **TV**, **ADD** or **STB**. The light will flash once, then turn solid. Then enter 956. The light will flash twice. 7
2. Check to see if you are in Favorites mode or regular mode. Press and hold **DEL** and **dash** - until the light flashes twice and turns off. This will enter or exit favorite channel mode.
3. Press **TV** and make sure the remote is controlling your TV. If not, reset the remote by going to Step 1 in the recommended set up.
4. Press **STB** and make sure the remote is controlling your STB. If not, reset the remote by going to Step 2 in the recommended set up.
5. Restore the original factory settings. Press and hold **ADD** until the light flashes once then turns solid, then enter 954. The light will be solid, then flash twice. If settings remain in the remote, also do the same with **TV** and **STB**.

## Code Retrieval

This feature will tell you the code that is currently programmed into the remote control. This can come in handy if you forget the code that was entered, if you used the automatic set up method, or for troubleshooting purposes. This instruction works for both TV and STB.

1. Press **TV**. The light will flash once, then press **1**, and release both.
2. The indicator light will flash – count the flashes - this represents the hundred digit 1xx. Note: If the light does not flash, the digit is zero.
3. Do the same with number **2** - this represents the ten digit placeholder – x2x.
4. Do the same with number **3** - this represents the ten digit placeholder – xx2.

The resulting three digit number is the number of light flashes in each position. For instance, if you see the light flash 4 times after pressing #1, and flash 3 times after pressing #2, and flash 2 times after pressing #3, then the code in the remote is 432.

### Reset the Remote

If at any time you want to reset the Flipper remote to original factory settings, press and hold **ADD** until the light flashes once then turns solid, then enter 954.

The light stays solid, then flashes twice. If settings remain in the remote, do the same with **TV** and **STB**.

### TV Brand Code List

ABEX	049,	CENTRIOS	153
ADMIRAL	163, 078,	CENTURION	138
	188	CETRONIC	219
ADVENT	067, 073,	CHANGHONG	021, 211
	241	CINERAL	115, 015
ADVENTURA	017	CITIZEN	001, 138,
AIKO	115		247, 043,
AIWA	050, 075,		147, 155,
	105, 158		045, 188,
ALLERON	193		110, 219,
AMARK	163		115
AMTRON	247	CLAIRTONE	002
AKAI	043, 215,	CLASSIC	021, 211,
	090, 296,		219
	302, 022,	CLP	009
	282, 337,	CLP CLASSIC	020, 004,
	309		006
ANAM NATIONAL	247, 243,	COBY	322, 272
	035, 219,	COLOR VOICE	162
	261	COLORTYME	001, 138,
AOC	001, 033,		162
	138, 305,	CONCERTO	001, 138
	002, 071,	CONCIERGE	200
	048, 101	CONTEC	247, 216,
APEX	021, 077,		002, 219
	052, 331,	CORNEA	166
	211	CRAIG	247, 219
ARCHER	163	CROSLEY	221
ASPECT	143	CROWN	247, 219
AUDIOVOX	247, 306,	CURTIS MATHES	191, 043,
	295,		174, 001,
AXION	100, 214		138, 161,
BANG & OLUFSEN	179		142, 147,
BELCOR	001		133, 188,
BELL & HOWELL	191, 142,		034
	161, 188	CTX	163
BENQ	196, 250,	CXC	247, 219
	198, 317	CYBERVISION	015
BLUESKY	285, 015	DAEWOO	174, 001,
BRADFORD	247		138, 171,
BROKSONIC	097, 045,		033, 122,
	182, 107,		246, 175,
	184, 024		141, 237,
BROKWOOD	001		159, 026,
CANDLE	001, 138,		169, 219,
	017, 110		115, 084,
CAPEHART	048		162, 068,
CCE	340		111, 095,
CELERA	021		139
CELEBRITY	215	DAYTRON	001, 138



**TV Brand Code List**

DELL	157, 112, 228	FISHER	130, 178, 216
DIAMOND VISION	181, 137, 224	FUJITSU	102, 193, 286
DIGIMATE	293	FUNAI	193, 155, 247, 105,
DIGISTAR	306, 047, 120, 067, 099, 228, 313, 326, 333	FUTURETEC	247, 219
DIMENSIA	191, 161	GATEWAY	060
DISNEY	124, 045	GE	191, 093, 016, 001, 138, 005,
DUKANE	143, 222		006, 161, 238, 243,
DUMONT	200, 001		044, 034, 217, 220,
DURABRAND	155, 045, 257, 053, 134, 104, 098, 283	GIBRALTER	091
DYNASTY	219	GOLDSTAR	200, 001 001, 138,
DYNEX-	045		033, 105, 132, 216, 088, 169,
-(See also Insignia)			071
ELEKTRA	188	GO VIDEO HDT100	186
ELECTROBAND	215, 002	GRADIENTE	335, 001, 257, 318,
ELECTROHOME	001, 138, 022, 243, 217		311
ELITE VIDEO	102	GRUNDY	193, 247
EMERSON	001, 138, 005, 045, 142, 193, 155, 247, 097, 141, 174, 181, 105, 264, 182, 237, 022, 107, 054, 079, 086, 028, 055, 080, 165, 192, 219, 190, 030, 003, 154, 037, 035, 085, 164, 218, 004, 036	GUESTVISION	208
		GVISION	276
		HAIER	196, 077, 104, 098, 297
		HALLMARK	001, 138
		HARVARD	247
		HEWLETT PACKARD	277, 269
		HITACHI	118, 143, 229, 167, 222, 001, 138, 197, 327, 188, 216, 194, 096, 150, 202, 154, 105, 240
		HISENSE	249, 233, 077, 287
ENVISION	001, 138, 008, 305	HUGHES	109, 240, 213
ESA	155	HYUNDAI	273
FISHER	142, 172,		

**TV Brand Code List**

ILO	128, 314, 271, 336, 070, 155	KURAZAI	188
IMA	247	LASONIC	181, 137
INFINITY	221, 131	LEGEND	067
IN FOCUS	161	LG	001, 166, 138, 033, 046, 228,
INITIAL	314, 070, 280, 308		105, 132, 216, 088, 169, 071, 109, 240, 213
INSIGNIA	252, 155, 104, 045, 255, 067, 099, 303, 080, 140	LIQUIDVIDEO	100, 125, 214
INTEGRA	206	LODGENET	191, 235, 161, 188
INTEQ	200	LOEWE	209, 221
JANEIL	017	LOGIK	191, 161, 188
JBL	221	LUCE	038
JCB	215	LUXMAN	001, 138
JC PENNEY	191, 001, 033, 138, 043, 093, 147, 006, 161, 091, 110, 216, 034, 217, 164, 220	LXI	191, 001, 138, 142, 221, 093, 147, 161, 105, 034
JENSEN	001, 138, 255	MAGNASONIC	193
JVC	167, 058, 102, 144, 176, 106, 268, 216, 039, 089, 202	MAGNAVOX	221, 001, 138, 260, 338, 078, 131, 080, 110, 116, 040, 202
KAWASHO	001, 138, 215	MAJESTIC	191, 161, 188
KAYPANI	048	MARANTZ	221, 206, 001, 138
KEC	219, 247	MAXENT	060
KENWOOD	001, 138	MEDION	263, 128, 124
KLH	021	MEGATRON	001, 138, 143
KLOSS NOVABEAM	116, 017	MEI	002
KOGI	276	MEMOREX	001, 138, 142, 193, 045, 191, 161, 292, 130, 184, 188
KONKA	247, 189, 057, 087, 062, 252, 239, 265, 140	MGA	001, 033, 138, 193,
KTV	247, 002, 190, 219, 168		



## TV Brand Code List

MGA	216, 217, 202, 178	ORION	036
MIDLAND	191, 200, 006, 093, 034	PANASONIC	205, 123, 006, 177, 221, 023, 210, 108, 187, 243, 168
MINTEK	070	PHILCO	221, 001, 033, 138, 260, 189, 304, 116, 040, 202, 243, 110
MINUTZ	220	PHILIPS	221, 020, 018, 129, 051, 076, 103, 001, 155, 260, 156, 180, 196, 310, 275, 131, 080, 243, 110, 116, 040, 064, 091, 202, 240
MITSUBISHI	033, 203, 193, 001, 138, 022, 217, 202, 178, 240		
MONIVISION	059,		
MONTGOMERY WARD	191, 188, 161,		
MOTEVA	142, 335,		
MOTOROLA	163, 243, 135,		
MTC	001, 033, 138, 043, 147, 002		
MULTITECH	247		
MULTIVISION	009		
MYRON & DAVIS	236		
NAD	001, 138, 147, 049		
NEC	206, 001, 033, 138, 243, 162, 042, 202	PHILIPS- -MAGNAVOX	221, 020, 103, 260, 078, 131
NETTV	060, 013	PILOT	001
NEXXTECH	330, 099	PIONEER	049, 206, 222, 001, 138, 170, 154, 027
NIKEI	219		
NIKKO	001, 138, 115	PIVA	279
NIKO	339	PLANAR	292
NORCENT	077, 246, 061	POLAROID	233, 259, 255, 306, 289, 140
NTC	115		
OLEVIA	294, 328, 316, 332, 291	PORTLAND	001, 033, 138, 122, 174
ONCOMMAND	208	PRECISION	072
ONKING	219	PRICE CLUB	043
ONWA	247, 219	PRIMA	306, 047, 067, 099, 073
OPTIMUS	177, 049, 023, 210		
OPTOMA	301	PRINCETON-	163, 146
OPTONICA	163, 042	- GRAPHICS	
ORION	200, 045,	PRISM	006

## TV Brand Code List

PROSCAN	191, 093, 034, 161, 231, 258, 081, 138	SAMPO	048, 216
PROTON	234, 001, 138, 312, 251, 048, 074	SAMSUNG	043, 090, 063, 147, 083, 138, 001, 033, 041, 232, 242, 133, 216, 034,
PROTRON	293, 298		169, 011, 066, 266, 160
PROVIEW	278, 288, 294	SAMSUX	138
PULSAR	200, 001	SAMTRON	043
QUASAR	205, 123, 006, 177, 221, 023, 210, 243,	SANSUI	045, 184
		SANTECA	019
RADIO SHACK	168	SANYO	142, 092, 172, 001, 130, 216, 119, 178
	191, 001, 114, 142, 247, 177, 138, 105, 238, 161, 216, 192,	SCEPTRE	151, 331,
		SCOTCH	001, 138,
		SCOTT	001, 138, 193, 247, 003, 036, 219
RCA	219, 042 191, 001, 114, 006, 010, 171, 225, 093, 149, 207, 033, 138, 161, 231, 258, 238, 243, 034, 217, 065, 253, 044, 154, 101, 127, 136,	SEARS	191, 221, 142, 193, 043, 001, 138, 093, 147, 172, 155, 161, 226, 145, 024, 080, 216, 034, 178
		SELECTRON	329, 313, 321
		SEMP	319
REALISTIC	081, 191, 001, 114, 142, 247, 177, 138, 161, 105, 216, 192, 219,	SHARP	145, 254, 248, 163, 001, 138, 078, 079, 056, 042, 227
RHAPSODY	042	SHOGUN	001
RUNCO	002, 200, 206,	SIGNATURE	191, 161, 188, 245
SAMPO	199, 013, 060, 001, 138,	SIMPSON	110
		SONIC	002
		SONY	121, 244,

## TV Brand Code List

SONY	215, 195, 185, 230, 267	TELERENT	191, 161, 188
SOVA	334, 281	TERA	001, 074
SOYO	315, 324	TEVION	128
SOUNDESIGN	001, 138, 193, 247 110, 219	TMK	001, 138
SPECTRA	181	TOSHIBA	152, 126, 147, 173, 206, 043, 142, 042, 177, 183, 133, 024, 031, 216, 042, 094, 202, 109, 213
SPECTRAVISION	262	TRUTECH	307, 284, 323
SQUAREVIEW	155	TV EARS	000
SSS	001, 247, 219	UNIVERSAL	220, 091
STARLITE	247	VICTOR	167
STAR SIGHT	007	VIDTECH	001, 033, 138
SUPRA	001, 223	VIEWSONIC	060, 222, 270, 274
SUPERSCAN	226, 145, 080	VIKING	017
SUPERSONIC	032	VIORE	300
SUPREMACY	017	VIZIO	196, 320, 001
SUPREME	215	WARDS	191, 221, 001, 033, 138, 193, 161, 116, 040, 091, 042, 148, 220, 188, 110, 003
SVA	077, 236	WESTINGHOUSE	256, 012, 290, 082, 171, 174, 122, 069, 299, 105, 159, 169
SYLVANIA	221, 001, 138, 045, 155, 260, 325, 105, 080, 134, 110, 116, 040, 202, 204, 212	WHITE - -WESTINGHOUSE	122, 069, 299, 105, 159, 169
SYMPHONIC	247, 155, 105, 080, 003	YAMAHA	177, 001, 033, 138
SYNTAX	294, 316, 332	ZENITH	200, 138, 166, 117, 197, 122, 143, 201, 113, 199, 014, 257, 007, 001, 045, 078, 105, 053, 106, 237, 079, 131, 184, 025, 133, 245, 141, 188, 115, 029
TANDY	163		
TATUNG	196, 128, 243		
TECHNICS	006		
TECHWOOD	001, 138, 006		
TEKNIKA	191, 001, 033, 138, 193, 247, 043, 147, 177, 161, 017, 188, 110, 216, 219		
TELECAPTION	094		

## STB Brand Code List

ABC	528, 564, 400, 417, 434, 588, 589, 663	DIRECTV	682, 683, 684, 685, 686, 693 560, 561, 505, 578, 444, 414, 445, 448, 450, 458, 465, 470, 478, 488, 496, 504, 508, 525, 545, 563, 577, 581, 586,
ACCESS HD	665,	DTV PAL	416, 433
ADELPHIA	551, 533, 625, 628 625	DISH NETWORK	433, 469, 487, 559, 416, 483, 501, 521, 606, 610, 618,
ADVANCED - -NEWHOUSE		DISHPRO	483, 501, 521, 416
ALLEGRO	405, 421	DRAKE	554, 408, 463
ALTRIO	625	DREAMBOX	524
AMERICAST	457, 598, 623	DX ANTENNA	481, 556
AMPLICA	425	EASTERN	453
ANTRONIX	472, 491	ECHOSPHERE	487
APEX*(See page 22)	545 561	ECHOSTAR	433, 469, 487, 559, 416, 483, 501, 521
ARCHER	472, 491, 511, 529	EVERQUEST	401
ARTEC	666	EXPRESSVU	416, 469, 433, 487
AT&T	533	FORTECSTAR	499, 423, 442, 460, 480, 498
ATLANTIC - -BROADBAND	625	FUJITSU	540, 557
BELL EXPRESSVU	416, 469, 433, 487	GARRARD	529
BELL SOUTH	457, 598, 623	GC ELECTRONICS	491
BLUE RIDGE	625	GE	450, 507, 468, 560, 581, 527, 546, 563, 497, 670
BRIGHT HOUSE	625	GEMINI	427, 441, 492
CABLETENNA	472		
CABLEVIEW	472		
CABLEVISION	438, 625		
CENTURY	459, 529		
CHANNEL MASTER	462, 482, 500, 667		
CHAPPARAL	518, 537		
CHARTER	625		
CHEYENNE	537		
CITIZEN	529		
COGECO	533		
COLOR VOICE	547, 565		
COMCAST	533, 625		
COMTRONICS	401, 418		
CONTEC	435		
COSHIP	668		
COX	625		
DIGITAL MUSIC- -EXPRESS	404		
DIGITAL STREAM	669		
DIRECTV	609, 611, 612, 613, 616, 617,		

## STB Brand Code List

GENERAL -	613	JERROLD	639, 640,
-ELECTRIC			648, 652,
GENERAL -	593, 621,		661, 662
-INSTRUMENT	634, 635,	JVC	487, 559,
	636, 637,		606, 610
	638, 639,	KENWOOD	484
	640, 648,	LASONIC	673
	652, 661,	LG	465, 561,
	662, 495,		545
	528, 417,	LUXOR	502
	533, 568,	MACOM	522
	477, 535,	MAGNAVOX	419, 444,
	404, 400,		559, 506,
	564, 467,		612
	562, 580,	MAGNAVOX -	674, 675
	415, 489,	-MODELS 100MG9	
	526, 432,	MEMOREX	436, 587,
	407, 424,		624
	443, 575	MICROGEM	676
GLOBECAST	571, 584	mitsubishi	545, 561,
GNC	623		488, 505,
GO VIDEO	523		525, 465
GOLDSTAR	590	MOTOROLA	489, 486,
GOODMIND	671		495, 417,
HAMLIN	528, 512,		568, 477,
	530, 548,		535, 400,
	591, 652,		533, 440,
	653, 654,		564, 621,
	655, 656		628, 629,
HITACHI	488, 505,		687, 688,
	525, 561,		689, 692
	545, 465,	MOVIE TIME	454
	564, 603	NET	479, 447,
	602		660
HUGHES	488, 561,	NORSTAT	541
HUGHES NETWORK	505, 509,	NOVAPLEX	422
	543, 545,	NOWTV	582
	465, 520	NSC	454
HUMAX	631	OAK	435, 493,
ILLICO	438, 625		657, 658,
INSIGNIA	672		659
JASCO	529	PACE	412, 429,
JERROLD	495, 528,		451, 625
	417, 477,	PANASONIC	449, 445,
	564, 400,		446, 510,
	515, 440,		476, 587,
	588, 593,		601, 649,
	621, 634,		650, 651
	635, 636,	PANSAT	409, 585
	637, 638,	PARAGON	436, 474,

## STB Brand Code List

PARAGON	587, 624	REMBRANDT	564
PHILCO	674	RODGERS	625
PHILIPS	529, 492,	ROGERS	438
	419, 513,	RUNCO	436, 587,
	531, 549,		624
	444, 559,	SAMSUNG	401, 402,
	543, 505,		410, 574,
	525, 561,		577, 448,
	488, 545,		504, 516,
	506, 465,		590, 611,
	428, 592,		615, 633
	612, 622	SANSONIC	678
PHILIPS -	420, 406,	SCIENTIFIC-	475, 455,
-MAGNAVOX	444, 559,	-ATLANTA	438, 422,
	506		551, 434,
PIONEER	411, 473,		437, 589,
	438, 566,		594, 597,
	402, 590,		620, 625,
	597, 596,		626, 627,
	625, 644,		641, 642,
	645		663, 664
PRIMESTAR	467, 526	SCIENTIFIC-	690
PROSAT	572	-ATLANTIC	
PROSCAN	450, 468,	SEREN	625
	527, 581,	SHARP	411
	546, 563,	SHAW	533
	600, 605,	SIERRA I II III	537
	613	SIGECOM	625
PULSAR	436, 587,	SIGNAL	401
	624	SIGNATURE	564
QUASAR	587	SKARDIN	679
RADIO SHACK	420, 406,	SKY NETWORK	412, 429,
	421		451, 458,
RCA	450, 507,		478, 496
	468, 560,	SL MARX	401
	490, 581,	SONY	578, 470,
	527, 546,		508, 426,
	563, 471,		558, 599,
	510, 529,		607, 608,
	456, 600,		619
	605, 613,	SPRUCER	510
	614, 677	STANDARD	494
RCN	570	STAR SIGHT	456, 579
REALISTIC	491, 576,	STAR TRAK	439, 485
	461	STARCHOICE	526, 432,
REGAL	548, 591,		467
	652, 653,	STARCOM	528, 477,
	654, 655,		588
	656	STARGATE	401
REGENCY	453	STS	481, 519,

## STB Brand Code List

STS	538	ZENITH	421, 529,
SUPER GUIDE	503		436, 534,
SUSPUEHANNA	625		552, 569,
SYLVANIA	539, 632		595, 587,
TANDY	514		598, 623,
TELEVIEW	401		624, 643,
TELSAT	459		672
TEXSCAN	494	ZENITH NETWORK	457
TIME WARNER	438, 625	ZENITECH	679
TIVAX	680		
TOCOM	400, 532,		
	568, 515,		
	646, 647,		
	661		
TOSHIBA	436, 545,		
	561, 488,		
	505, 525,		
	465, 555,		
	413, 430,		
	544, 587,		
	604, 624		
TV 86	454		
TVA	536		
ULTIMATE TV	581, 508		
UNIDEN	579, 573,		
	542		
UNIKA	472, 491,		
	529		
UNITED	464, 528		
UNIVERSAL	472, 491,		
	511, 529,		
	550, 405		
USDIGITAL	630		
MOTOROLA/	681, 691,		
-VERIZON	692		
VIDEO CIPHER II	408		
VIDEO TECH	517		
VIDEOTRON	438, 625		
VIDEOWAY	403		
VIEWSTAR	418, 419,		
	454, 514		
VISIONETICS	583		
VISIONTEC	553		
WEBTV	559, 426		
WIDEOPENWEST	623, 625,		
ZENITH	466, 414,		
	452, 427,		
	451, 554,		
	408, 463,		
	431, 567,		

\* For Apex, use learning mode to learn the dash key.